


ESTE NECESSAR MODIFICAREA, INSTRUMAREA, COPIEREA SI MULTIPLICAREA ACESTOR SCHEME ELECTRICE SUB FORMA TIPARITA SAU ELECTRONICA, FARA APROBAREA SORSA A IEPOT, CARE ARE DREPTUL DE PROPRIETATE INTELLECTUALA ASUPRA ACESTORA.
 ESTE PERMISA UTILIZAREA ACESTOR SCHEME NUMAI PENTRU SPECIFICITATI DIN IEPOT SI NUAMI IN INTERESUL IEPOT.
 IEPOT SI REZERVA DREPTUL DE A MODIFICA ACESTE SCHEME ELECTRICE AJUNDO CAND CONSIDERA CA ESTE NECESSAR, FARA PREAVIZ.

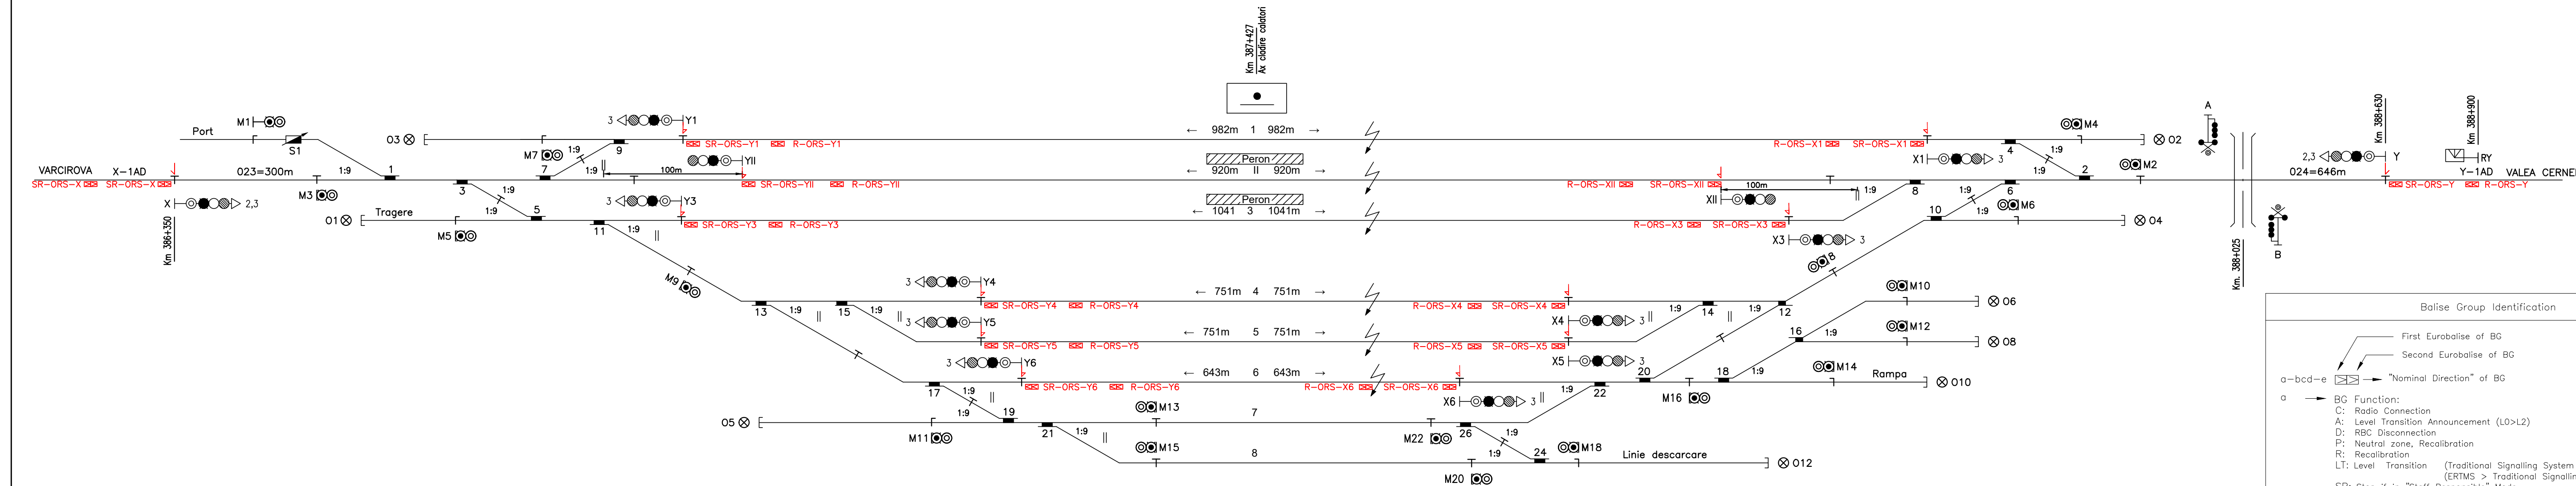

Balise Group Identification		Identificarea Grupului de Balize	
<p>First Eurobalise of BG Second Eurobalise of BG</p> <p>→ "Nominal Direction" of BG</p> <p>→ BG Function: C: Radio Connection A: Level Transition Announcement (L0>L2) D: RBC Disconnection P: Neutral zone, Recalibration R: Recalibration LT: Level Transition (Traditional Signalling System > ERTMS) (ERTMS > Traditional Signalling System) SR: Stop if in "Staff Responsible" Mode</p> <p>→ ID-Station: ORS (Orsova)</p> <p>→ Referred Object BG type R, SR: next signal or level crossing BG type P: Neutral zone axis in KM</p>	<p>Prima Eurobaliza de BG A doua Eurobaliza de BG</p> <p>→ "Directia Nominala" of BG</p> <p>→ Functia BG: C: Conexiunea Radio A: Nivelul de Tranziție Anuntat (L0>L2) D: Deconectare RBC P: Zona Neutra, Recalibrare R: Recalibrare LT: Tranziție de Nivel (Sistemul de Semnalizare Traditional > ERTMS) (ERTMS > Sistemul de Semnalizare Traditional) SR: Stop daca in Modul "Staff Responsible"</p> <p>→ ID-Station: ORS (Orsova)</p> <p>→ Obiect de Referinta BG tip R, SR: semnal urmat sau trecerea la nivel BG tip P: Zona neutra axei in KM</p>		
SYMBOLS		SIMBOLURI	
	BALISE GROUP		GRUP DE BALIZE
	END OF AUTHORITY (EoA) - "bcd" Station Name Acronym - "e" Referred Signal		Sfârșitul MA (EoA) - "bcd" nume statie acronim - "e" Semnal de Referinta
	EoA with RELEASE SPEED - "bcd" Station Name Acronym - "e" Referred Signal		Sfârșitul MA cu viteza de eliberare - "bcd" NUME STATIE ACRONIM - "e" Semnal de Referinta
	Joint		Joanta
	Indusi balise		Indusi balize
	Neutral zone		Zona Neutra
Distance between a station entry signal and a related recalibration balise group is approx. 200m		Distanta dintre semnal de intrare in statie si referitor grupa de balize de recalibrare este approx. 200m	
Distance between a station exit signal and a related recalibration balise group is approx. 200m		Distanta dintre semnal de iesire din statie si referitor grupa de balize de recalibrare este approx. 200m	
Distance between a level crossing and a related recalibration balise group is approx. 100m		Distanta dintre trecere de nivel si referitor grupa de balize de recalibrare este (approx. 100m)	

CLIENT / CLIENT **C.N.C.F. "C.F.R." - S.A.**

CONSULTANT / CONSULTANT				
Faza Phase	Positia Position	Nume Name	Data Date	Semnatura Signature
Aprobat Approved	Manager de Proiect Project Manager	Sergio MENICHINI	09.2020	
Verificat Checked	Expert Cheie Key Expert	Pino AMODIO	09.2020	
Intocmit Elaborated	Proiectant Designer	Pino AMODIO Tetiana KRAVICH	09.2020	

SUBCONSULTANT / SUBCONSULTANT			
Aprobat Approved	Responsabil Subconsultant Subconsultant Responsible		
Intocmit Elaborated	Proiectant Designer		

Studiu de Fezabilitate pentru Reabilitarea liniei feroviare Craiova - Drobeta Turnu Severin - Caransebes, parte a Coridorului Orient/Est Mediteranean - Feasibility Study For The Rehabilitation Of The Railway Line Craiova - Caransebes

Proiect/Project 74 / 2018
Faza/Phase S.F.

Denumire / Title : STATIA / STATION ORSOVA
Schita cu semnalizarea ERTMS / ERTMS Signalling sketch

Codificare / Codification System

E 2 1 8 0 S F 3 6 D X S E 3 0 0 0 0 1 1

Istoricul reviziilor / Revision History		
Rev.	Data/Date	Descriere Modificare / Modification description
1		
2		
3		
4		

Responsabilitatea privind această publicație revine integral autorului. Uniunea Europeană nu este responsabilă pentru modul în care sunt utilizate informațiile publicate.
 The contents of this publication are the sole responsibility of (name of the implementing partner) and do not necessarily reflect the opinion of the European Union.